



OcNOS[®]
Open Compute
Network Operating System
Version 6.5.2

Licensing Guide
August 2024

© 2024 IP Infusion Inc. All Rights Reserved.

This documentation is subject to change without notice. The software described in this document and this documentation are furnished under a license agreement or nondisclosure agreement. The software and documentation may be used or copied only in accordance with the terms of the applicable agreement. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or any means electronic or mechanical, including photocopying and recording for any purpose other than the purchaser's internal use without the written permission of IP Infusion Inc.

IP Infusion Inc.

3965 Freedom Circle, Suite 200

Santa Clara, CA 95054

+1 408-400-1900

<http://www.ipinfusion.com/>

For support, questions, or comments via E-mail, contact:

support@ipinfusion.com

Trademarks:

IP Infusion and OcNOS are trademarks or registered trademarks of IP Infusion. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Use of certain software included in this equipment is subject to the IP Infusion, Inc. End User License Agreement at <http://www.ipinfusion.com/license>. By using the equipment, you accept the terms of the End User License Agreement.

Contents

Preface	5
IP Maestro Support	5
Audience	5
Conventions	5
Chapter Organization	5
Related Documentation	5
Feature Availability	6
Migration Guide	6
Support	6
Comments	6
Command Line Interface	7
Overview	7
Command Line Interface Help	7
Command Completion	8
Command Abbreviations	8
Command Line Errors	8
Command Negation	9
Syntax Conventions	9
Variable Placeholders	10
Command Description Format	11
Keyboard Operations	11
Show Command Modifiers	12
String Parameters	15
Command Modes	15
Transaction-based Command-line Interface	17
Install, License, and Upgrade Configuration Guide	18
CHAPTER 1 Install, License, and Upgrade Configuration	19
Install, License, and Upgrade Command Reference	20
CHAPTER 1 Licensing and Upgrade Commands	21
license get	22
license refresh	23
license release	24
show installers	25
show license	26
show sys-update details	27
sys-update delete	28
sys-update get	29
sys-update install	31
sys-update list-version	33
sys-update un-install	34

sys-update verify35

Index 36

Preface

This guide describes how to configure OcNOS.

IP Maestro Support

Monitor devices running OcNOS Release 6.3.4-70 and above using IP Maestro software.

Audience

This guide is intended for network administrators and other engineering professionals who configure OcNOS.

Conventions

[Table P-1](#) shows the conventions used in this guide.

Table P-1: Conventions

Convention	Description
Italics	Emphasized terms; titles of books
Note:	Special instructions, suggestions, or warnings
<code>monospaced type</code>	Code elements such as commands, parameters, files, and directories

Chapter Organization

The chapters in command references are organized as described in [Command Description Format](#).

The chapters in configuration guides are organized into these major sections:

- An overview that explains a configuration in words
 - Topology with a diagram that shows the devices and connections used in the configuration
 - Configuration steps in a table for each device where the left-hand side shows the commands you enter and the right-hand side explains the actions that the commands perform
 - Validation which shows commands and their output that verify the configuration
-

Related Documentation

For information about installing OcNOS, see the *Installation Guide* for your platform.

Feature Availability

The features described in this document that are available depend upon the OcNOS SKU that you purchased. See the *Feature Matrix* for a description of the OcNOS SKUs.

Migration Guide

Check the *Migration Guide* for configuration changes to make when migrating from one version of OcNOS to another.

Support

For support-related questions, contact support@ipinfusion.com.

Comments

If you have comments, or need to report a problem with the content, contact techpubs@ipinfusion.com.

Command Line Interface

This chapter introduces the OcNOS Command Line Interface (CLI) and how to use its features.

Overview

You use the CLI to configure, monitor, and maintain OcNOS devices. The CLI is text-based and each command is usually associated with a specific task.

You can give the commands described in this manual locally from the console of a device running OcNOS or remotely from a terminal emulator such as `putty` or `xterm`. You can also use the commands in scripts to automate configuration tasks.

Command Line Interface Help

You access the CLI help by entering a full or partial command string and a question mark “?”. The CLI displays the command keywords or parameters along with a short description. For example, at the CLI command prompt, type:

```
> show ?
```

The CLI displays this keyword list with short descriptions for each keyword:

```
show ?
  application-priority      Application Priority
  arp                       Internet Protocol (IP)
  bfd                       Bidirectional Forwarding Detection (BFD)
  bgp                       Border Gateway Protocol (BGP)
  bi-lsp                    Bi-directional lsp status and configuration
  bridge                    Bridge group commands
  ce-vlan                   COS Preservation for Customer Edge VLAN
  class-map                 Class map entry
  cli                       Show CLI tree of current mode
  clns                      Connectionless-Mode Network Service (CLNS)
  control-adjacency        Control Adjacency status and configuration
  control-channel          Control Channel status and configuration
  cspf                      CSPF Information
  customer                  Display Customer spanning-tree
  cvlan                     Display CVLAN information
  debugging                 Debugging functions (see also 'undebug')
  etherchannel              LACP etherchannel
  ethernet                  Layer-2
  ...
```

If you type the ? in the middle of a keyword, the CLI displays help for that keyword only.

```
> show de?
  debugging Debugging functions (see also 'undebug')
```

If you type the ? in the middle of a keyword, but the incomplete keyword matches several other keywords, OcNOS displays help for all matching keywords.

```
> show i? (CLI does not display the question mark).
  interface Interface status and configuration
  ip          IP information
  isis        ISIS information
```

Command Completion

The CLI can complete the spelling of a command or a parameter. Begin typing the command or parameter and then press the tab key. For example, at the CLI command prompt type `sh`:

```
> sh
```

Press the tab key. The CLI displays:

```
> show
```

If the spelling of a command or parameter is ambiguous, the CLI displays the choices that match the abbreviation. Type `show i` and press the tab key. The CLI displays:

```
> show i
  interface ip          ipv6          isis
> show i
```

The CLI displays the `interface` and `ip` keywords. Type `n` to select `interface` and press the tab key. The CLI displays:

```
> show in
> show interface
```

Type `?` and the CLI displays the list of parameters for the `show interface` command.

```
> show interface
  IFNAME  Interface name
  |       Output modifiers
  >      Output redirection
  <cr>
```

The CLI displays the only parameter associated with this command, the `IFNAME` parameter.

Command Abbreviations

The CLI accepts abbreviations that uniquely identify a keyword in commands. For example:

```
> sh int xe0
```

is an abbreviation for:

```
> show interface xe0
```

Command Line Errors

Any unknown spelling causes the CLI to display the error `Unrecognized command` in response to the `?`. The CLI displays the command again as last entered.

```
> show dd?
% Unrecognized command
> show dd
```

When you press the Enter key after typing an invalid command, the CLI displays:

```
(config)#router ospf here
                               ^
% Invalid input detected at '^' marker.
```

where the `^` points to the first character in error in the command.

If a command is incomplete, the CLI displays the following message:

```
> show
% Incomplete command.
```

Some commands are too long for the display line and can wrap mid-parameter or mid-keyword, as shown below. This does *not* cause an error and the command performs as expected:

```
area 10.10.0.18 virtual-link 10.10.0.19 authent
ication-key 57393
```

Command Negation

Many commands have a `no` form that resets a feature to its default value or disables the feature. For example:

- The `ip address` command assigns an IPv4 address to an interface
- The `no ip address` command removes an IPv4 address from an interface

Syntax Conventions

[Table P-2](#) describes the conventions used to represent command syntax in this reference.

Table P-2: Syntax conventions

Convention	Description	Example
monospaced font	Command strings entered on a command line	<code>show ip ospf</code>
lowercase	Keywords that you enter exactly as shown in the command syntax.	<code>show ip ospf</code>
UPPERCASE	See Variable Placeholders	IFNAME
()	Optional parameters, from which you must select one. Vertical bars delimit the selections. Do not enter the parentheses or vertical bars as part of the command.	<code>(A.B.C.D <0-4294967295>)</code>
()	Optional parameters, from which you select one or none. Vertical bars delimit the selections. Do not enter the parentheses or vertical bars as part of the command.	<code>(A.B.C.D <0-4294967295>)</code>
()	Optional parameter which you can specify or omit. Do not enter the parentheses or vertical bar as part of the command.	<code>(IFNAME)</code>
{ }	Optional parameters, from which you must select one or more. Vertical bars delimit the selections. Do not enter the braces or vertical bars as part of the command.	<code>{intra-area <1-255> inter-area <1-255> external <1-255>}</code>

Table P-2: Syntax conventions (Continued)

Convention	Description	Example
[]	Optional parameters, from which you select zero or more. Vertical bars delimit the selections. Do not enter the brackets or vertical bars as part of the command.	[<1-65535> AA:NN internet local-AS no-advertise no-export]
?	Nonrepeatable parameter. The parameter that follows a question mark can only appear once in a command string. Do not enter the question mark as part of the command.	?route-map WORD
.	Repeatable parameter. The parameter that follows a period can be repeated more than once. Do not enter the period as part of the command.	set as-path prepend .<1-65535>

Variable Placeholders

Table P-3 shows the tokens used in command syntax use to represent variables for which you supply a value.

Table P-3: Variable placeholders

Token	Description
WORD	A contiguous text string (excluding spaces)
LINE	A text string, including spaces; no other parameters can follow this parameter
IFNAME	Interface name whose format varies depending on the platform; examples are: eth0, Ethernet0, ethernet0, xe0
A.B.C.D	IPv4 address
A.B.C.D/M	IPv4 address and mask/prefix
X:X::X:X	IPv6 address
X:X::X:X/M	IPv6 address and mask/prefix
HH:MM:SS	Time format
AA:NN	BGP community value
XX:XX:XX:XX:XX:XX	MAC address
<1-5> <1-65535> <0-2147483647> <0-4294967295>	Numeric range

Command Description Format

[Table P-4](#) explains the sections used to describe each command in this reference.

Table P-4: Command descriptions

Section	Description
Command Name	The name of the command, followed by what the command does and when should it be used
Command Syntax	The syntax of the command
Parameters	Parameters and options for the command
Default	The state before the command is executed
Command Mode	The mode in which the command runs; see Command Modes
Example	An example of the command being executed

Keyboard Operations

[Table P-5](#) lists the operations you can perform from the keyboard.

Table P-5: Keyboard operations

Key combination	Operation
Left arrow or Ctrl+b	Moves one character to the left. When a command extends beyond a single line, you can press left arrow or Ctrl+b repeatedly to scroll toward the beginning of the line, or you can press Ctrl+a to go directly to the beginning of the line.
Right arrow or Ctrl-f	Moves one character to the right. When a command extends beyond a single line, you can press right arrow or Ctrl+f repeatedly to scroll toward the end of the line, or you can press Ctrl+e to go directly to the end of the line.
Esc, b	Moves back one word
Esc, f	Moves forward one word
Ctrl+e	Moves to end of the line
Ctrl+a	Moves to the beginning of the line
Ctrl+u	Deletes the line
Ctrl+w	Deletes from the cursor to the previous whitespace
Alt+d	Deletes the current word
Ctrl+k	Deletes from the cursor to the end of line
Ctrl+y	Pastes text previously deleted with Ctrl+k, Alt+d, Ctrl+w, or Ctrl+u at the cursor

Table P-5: Keyboard operations (Continued)

Key combination	Operation
Ctrl+t	Transposes the current character with the previous character
Ctrl+c	Ignores the current line and redisplay the command prompt
Ctrl+z	Ends configuration mode and returns to exec mode
Ctrl+l	Clears the screen
Up Arrow or Ctrl+p	Scroll backward through command history
Down Arrow or Ctrl+n	Scroll forward through command history

Show Command Modifiers

You can use two tokens to modify the output of a `show` command. Enter a question mark to display these tokens:

```
# show users ?
  | Output modifiers
  > Output redirection
```

You can type the | (vertical bar character) to use output modifiers. For example:

```
> show rsvp | ?
begin      Begin with the line that matches
exclude    Exclude lines that match
include    Include lines that match
last       Last few lines
redirect   Redirect output
```

Begin Modifier

The `begin` modifier displays the output beginning with the first line that contains the input string (everything typed after the `begin` keyword). For example:

```
# show running-config | begin xe1
...skipping
interface xe1
  ipv6 address fe80::204:75ff:fee6:5393/64
!
interface xe2
  ipv6 address fe80::20d:56ff:fe96:725a/64
!
line con 0
  login
!
end
```

You can specify a regular expression after the `begin` keyword. This example begins the output at a line with either “xe2” or “xe4”:

```
# show running-config | begin xe[2-4]
...skipping
```

```

interface xe2
 shutdown
!
interface xe4
 shutdown
!
interface svlan0.1
 no shutdown
!
route-map myroute permit 2
!
route-map mymap1 permit 10
!
route-map rmap1 permit 2
!
line con 0
 login
line vty 0 4
 login
!
end

```

Include Modifier

The `include` modifier includes only those lines of output that contain the input string. In the output below, all lines containing the word “input” are included:

```

# show interface xe1 | include input
  input packets 80434552, bytes 2147483647, dropped 0, multicast packets 0
  input errors 0, length 0, overrun 0, CRC 0, frame 0, fifo 1, missed 0

```

You can specify a regular expression after the `include` keyword. This examples includes all lines with “input” or “output”:

```

#show interface xe0 | include (in|out)put
  input packets 597058, bytes 338081476, dropped 0, multicast packets 0
  input errors 0, length 0, overrun 0, CRC 0, frame 0, fifo 0, missed 0
  output packets 613147, bytes 126055987, dropped 0
  output errors 0, aborted 0, carrier 0, fifo 0, heartbeat 0, window 0

```

Exclude Modifier

The `exclude` modifier excludes all lines of output that contain the input string. In the following output example, all lines containing the word “input” are excluded:

```

# show interface xe1 | exclude input
Interface xe1
 Scope: both
 Hardware is Ethernet, address is 0004.75e6.5393
 index 3 metric 1 mtu 1500 <UP,BROADCAST,RUNNING,MULTICAST>
 VRF Binding: Not bound
 Administrative Group(s): None
 DSTE Bandwidth Constraint Mode is MAM
 inet6 fe80::204:75ff:fee6:5393/64
   output packets 4438, bytes 394940, dropped 0
   output errors 0, aborted 0, carrier 0, fifo 0, heartbeat 0, window 0
 collisions 0

```

You can specify a regular expression after the `exclude` keyword. This example excludes lines with “output” or “input”:

```
# show interface xe0 | exclude (in|out)put
Interface xe0
  Scope: both
  Hardware is Ethernet   Current HW addr: 001b.2139.6c4a
  Physical:001b.2139.6c4a Logical:(not set)
  index 2 metric 1 mtu 1500 duplex-full arp ageing timeout 3000
  <UP,BROADCAST,RUNNING,MULTICAST>
  VRF Binding: Not bound
  Bandwidth 100m
  DHCP client is disabled.
  inet 10.1.2.173/24 broadcast 10.1.2.255
  VRRP Master of :   VRRP is not configured on this interface.
  inet6 fe80::21b:21ff:fe39:6c4a/64
  collisions 0
```

Redirect Modifier

The `redirect` modifier writes the output into a file. The output is not displayed.

```
# show cli history | redirect /var/frame.txt
```

The output redirection token (`>`) does the same thing:

```
# show cli history >/var/frame.txt
```

Last Modifier

The `last` modifier displays the output of last few number of lines (As per the user input). The last number ranges from 1 to 9999.

For example:

```
#show running-config | last 10
```

String Parameters

The restrictions in [Table P-6](#) apply for all string parameters used in OcNOS commands, unless some other restrictions are noted for a particular command.

Table P-6: String parameter restrictions

Restriction	Description
Input length	1965 characters or less
Restricted special characters	“?” , “,” , “>” , “ ” , and “=” The “ ” character is allowed only for the <code>description</code> command in interface mode.

Command Modes

Commands are grouped into modes arranged in a hierarchy. Each mode has its own set of commands. [Table P-7](#) lists the command modes common to all protocols.

Table P-7: Common command modes

Name	Description
Executive mode	Also called <i>view</i> mode, this is the first mode to appear after you start the CLI. It is a base mode from where you can perform basic commands such as <code>show</code> , <code>exit</code> , <code>quit</code> , <code>help</code> , and <code>enable</code> .
Privileged executive mode	Also called <i>enable</i> mode, in this mode you can run additional basic commands such as <code>debug</code> , <code>write</code> , and <code>show</code> .
Configure mode	Also called <i>configure terminal</i> mode, in this mode you can run configuration commands and go into other modes such as <code>interface</code> , <code>router</code> , <code>route map</code> , <code>key chain</code> , and <code>address family</code> . Configure mode is single user. Only one user at a time can be in configure mode.
Interface mode	In this mode you can configure protocol-specific settings for a particular interface. Any setting you configure in this mode overrides a setting configured in router mode.
Router mode	This mode is used to configure router-specific settings for a protocol such as BGP or OSPF.

Command Mode Tree

The diagram below shows the common command mode hierarchy.

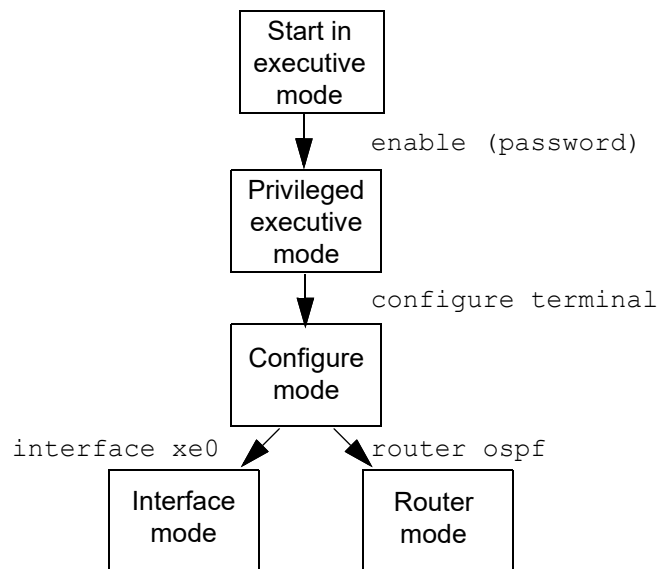


Figure P-1: Common command modes

To change modes:

1. Enter privileged executive mode by entering `enable` in Executive mode.
2. Enter configure mode by entering `configure terminal` in Privileged Executive mode.

The example below shows moving from executive mode to privileged executive mode to configure mode and finally to router mode:

```
> enable mypassword
# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
(config)# router ospf
(config-router)#
```

Note: Each protocol can have modes in addition to the common command modes. See the command reference for the respective protocol for details.

Transaction-based Command-line Interface

The OcNOS command line interface is transaction based:

- Any changes done in configure mode are stored in a separate *candidate* configuration that you can view with the `show transaction current` command.
- When a configuration is complete, apply the candidate configuration to the running configuration with the `commit` command.
- If a `commit` fails, no configuration is applied as the entire transaction is considered failed. You can continue to change the candidate configuration and then retry the `commit`.
- Discard the candidate configuration with the `abort transaction` command.
- Check the last aborted transaction with the `show transaction last-aborted` command.
- Multiple configurations cannot be removed with a single `commit`. You must remove each configuration followed by a `commit`.

Note: All commands MUST be executed only in the default CML shell (`cmlsh`). If you log in as root and start `imish`, then the system configurations will go out of sync. The `imish` shell is not supported and should not be started manually.

Install, License, and Upgrade Configuration Guide

CHAPTER 1 Install, License, and Upgrade Configuration

The *OcNOS Installation Guide* provides instructions for installing and licensing OcNOS. It includes the following steps:

- Download the OcNOS installation image.
- Download an OcNOS license.
- Install OcNOS:
 - From an FTP, HTTP, or TFTP server
 - From a USB stick
 - Using Zero Touch Provisioning
- Set up a license

OcNOS supports both patch upgrades and full upgrades:

- A patch upgrade updates to a new OcNOS image with bug fixes but without kernel changes.
- A full upgrade updates to a new OcNOS ONIE image with bug fixes, including kernel changes.

The *OcNOS Installation Guide* also covers procedures for upgrading existing OcNOS installations by either:

- Installing a new OcNOS version over an existing OcNOS version saves the existing configuration files.
- Installing a fresh OcNOS version is destructive and removes existing configuration files, SSH keys, and trial licenses. Users must manually restore these items from backups as needed.

Install, License, and Upgrade Command Reference

CHAPTER 1 Licensing and Upgrade Commands

This chapter describes the license and upgrade commands.

- [license get](#)
- [license refresh](#)
- [license release](#)
- [show installers](#)
- [show license](#)
- [show sys-update details](#)
- [sys-update delete](#)
- [sys-update get](#)
- [sys-update install](#)
- [sys-update list-version](#)
- [sys-update un-install](#)
- [sys-update verify](#)

license get

Use this command to fetch the license for this device from a network path or a USB mount path. This command validates the license against the device identifier.

Note: Ensure the system date is correct to avoid installation failure.

For HTTP, FTP, or TFTP, ensure the IP address is reachable from the OcNOS device and the file location is correct.

To install a license from a USB stick, insert the USB stick, and access its contents at `///mnt/usb/`. For example:

```
>license get file:///mnt/usb/IPI-CC37ABBE0340.bin
```

After running the `license get` command, users can immediately use the switch without rebooting. To verify, run the [show license](#) command after executing this command.

Command Syntax

```
license get ((source-interface IFNAME)) WORD
```

Parameters

IFNAME	Specifies the interface used to download the license. If not specified, the system uses eth0 by default.
	If the management interface of the switch is in the “management” VRF, the command will use the “management” VRF to get the license from the specified path. Users do not need to know if the management port is in the default VRF or the “management” VRF.
WORD	Specifies the location from which to get the license.
	<pre>ftp://your-server-ip/path/to/file/IPI_deviceId.bin http://your-server-ip/path/to/file/IPI_deviceId.bin tftp://your-server-ip/path/to/file/IPI_deviceId.bin file:///mnt-point/usb/path/to/file/IPI_deviceId.bin</pre>

Default

None

Command Mode

Exec mode

Applicability

Introduced before OcNOS version 1.3.

Examples

```
>license get http://myServer/IPI-CC37ABBE0340.bin
```

Specify the `source-interface` parameter to set the interface to use:

```
>license get source-interface xe2 http://myServer/IPI-CC37ABBE0340.bin
```

license refresh

Use this command to install a license present on the device. This command is needed only if the [license get](#) command reports an error while installing the license but successfully downloaded the license.

If users run this command without specifying a file name, the device installs the most recently downloaded license file.

Note: Always ensure the device date is up to date to avoid license installation failures.

Once this command completes successfully, users can use the device without rebooting. Verify the license installation with the [show license](#) command.

Command Syntax

```
license refresh (FILENAME|)
```

Parameters

FILENAME	Specifies the license file name which exists on the device.
----------	---

Default

None

Command Mode

Exec mode

Applicability

Introduced in OcNOS version 1.3.7.

Examples

```
>license refresh  
>license refresh IPI-CH3QX42.bin
```

license release

Use this command to release any type of license, whether node-locked or floating, on the device. The device license is revoked immediately.

Command Syntax

```
license release
```

Parameters

None

Default

None

Command Mode

Exec mode

Applicability

Introduced in OcNOS version 3.0.

Examples

```
>license release
```

show installers

Use this command to display a list of downloaded images on the device.

Command Syntax

```
show installers
```

Parameters

None

Default

None

Command Mode

Exec mode

Applicability

Introduced in OcNOS version 1.3.6.

Examples

```
OcNOS#show installers  
/installers/OcNOS-SP-IPBASE-Q1-6.3.3-41-MR-installer
```

show license

Use this command to display the current license details and errors. Each device requires a separate license, as licenses are device-locked.

Command Syntax

```
show license
```

Parameters

None

Default

None

Command Mode

Exec mode

Applicability

Introduced before OcNOS version 1.3.

Examples

```
OcNOS>show license
License Type: Trial edition
Remaining day to expires : 21 day(s)
Node Identifier: 1402EC2DA140
Device Software : OCNOS-SP-IPBASE-300
```

show sys-update details

Use this command to display upgrade details. The output indicates whether the current version is committed or rolled back.

Command Syntax

```
show sys-update details
```

Parameters

None

Default

None

Command Mode

Exec mode and Privileged Exec mode

Applicability

Introduced before OcNOS version 1.3.

Examples

```
OcNOS#show sys-update details
Previous_version OcNOS-6.1.0-133-IPBASE_Q1-LD-installer
Current_version OcNOS-SP-IPBASE-Q1-6.3.3-41-MR-installer
(committed)
Last_upgraded Wed Sep 26 14:40:06 UTC 2018
Auto Rollback end time NA
```

sys-update delete

Use this command to delete a downloaded image.

Command Syntax

```
sys-update delete IMAGE_NAME
```

Parameters

IMAGE_NAME Specifies the installer name to delete.

Default

None

Command mode

Privileged Exec mode

Applicability

Introduced in OcNOS version 1.3.6.

Examples

```
OcNOS#sys-update delete OcNOS-SP-IPBASE-Q1-6.3.3-41-MR-installer
```

sys-update get

Use this command to download an installer image.

Note:

- Ensure that the URL complies with RFC 3986.
- When downloading the installer through the TFTP protocol, users may encounter a situation where the download progress shows 100% from the start to the end of the download. This behavior occurs when the TFTP server doesn't support TFTP Option Negotiation. Additionally, there are instances where TFTP download takes longer, even timing out after 30 minutes, despite the client and server being on the same subnet. This delay is often due to latency issues, with some TFTP server implementations exhibiting performance lag. In such cases, switching to a different TFTP server is recommended. The TFTP download operation has been verified on a Debian Linux machine against the server present in the `tftpd-hpa` package.
- For SCP and SFTP downloads, ensure that the IP address/hostname is present in the `known_hosts` file. Otherwise, SCP and SFTP will fail with the error message `curl: (60) SSL peer certificate or SSH remote key was not OK`. If `sys-update` fails, the user is prompted to add the hostname/IP address in the `known_hosts` file to proceed with `sys-update`.

Command Syntax

```
sys-update get ((source-interface IFNAME) | (source-ip (A.B.C.D | X:X::X:X))) | URL
(verbose|)
```

Parameters

<code>source-interface</code> <code>IFNAME</code>	(Optional) Specifies the source interface name used to download the new version. If not specified, <code>eth0</code> is used.
<code>URL</code>	Specifies the URL parameter to indicate where to get the installer. <code>http://username:password@your-server-ip/path/to/file/<abc-installer>></code> or <code>ftp://username:password@your-server-ip/path/to/file/<abc-installer>></code> or <code>tftp://your-server-ip/path/to/file/<abc-installer>></code> or <code>scp://username:password@your-server-ip/path/to/file/<abc-installer></code> or <code>sftp://username:password@your-server-ip/path/to/file/<abc-installer>></code> or <code>file:///mnt/usb/path/to/file/<abc-installer></code>
<code>source-ip</code> <code>A.B.C.D</code>	(Optional) Specifies the IPv4 address of the interface used to download the new version.
<code>source-ip</code> <code>X:X::X:X</code>	(Optional) Specifies the IPv6 address of the interface used to download the new version.
<code>verbose</code>	(Optional) Include download logs in the output.

Default

None

Command Mode

Privileged Exec mode

Applicability

Introduced in OcnOS version 1.3.6.

Examples

```
OcnOS#sys-update get source-interface xe3 http://myServer/OcnOS-SP-MPLS-
Q1-6.3.3-41-MR-installer
```

Example using SCP if the IP address or hostname is not present in the `known_hosts` file:

```
OcnOS#sys-update get scp://root@10.12.33.204/home/OcnOS-SP-MPLS-
Q1-6.3.3-41-MR-installer
VRF default cannot be deleted or not exists
Please wait ...
curl: (60) SSL peer certificate or SSH remote key was not OK
More details here: curl - SSL CA Certificates
curl failed to verify the legitimacy of the server and therefore could not
establish a secure connection to it. To learn more about this situation and
how to fix it, please visit the web page mentioned above.
The host name is not added in known_host
Do you want to add it to known_host
  continue (y/n):y
Successfully added host to known_hosts file.
Please wait ...

OcnOS#show installers
/installers/OcnOS-SP-MPLS-Q1-6.3.3-39-MR-installer
/installers/OcnOS-SP-MPLS-Q1-6.3.3-41-MR-installer
```

sys-update install

Use this command to upgrade the current software to a newer version. Users can perform two types of installations:

- If a `.deb` file is provided, the board is loaded with new binaries.
- If an installer file is provided, the board is completely installed with a new kernel and binaries.

Note:

1. During an upgrade, if a license is not available the existing configuration is not applied. Also, the `ZebOS.conf` file is not created and the `terminal monitor` command is not allowed.
2. Ensure that the URL complies with RFC 3986.
3. When executing this command without the `source-interface` parameter, the system uses `eth0` and the default management VRF. When executing this command with the `source-interface` parameter, it uses the specified interface.
4. When downloading the installer through the TFTP protocol, users may encounter a situation where the download progress shows 100% from the start to the end of the download. This behavior occurs when the TFTP server doesn't support TFTP Option Negotiation. Additionally, there are instances where TFTP download takes longer, even timing out after 30 minutes, despite the client and server being on the same subnet. This delay is often due to latency issues, with some TFTP server implementations exhibiting performance lag. In such cases, switching to a different TFTP server is recommended. The TFTP download operation has been verified on a Debian Linux machine against the server present in the `tftpd-hpa` package.
5. For SCP and SFTP downloads, ensure that the IP address/hostname is present in the `known_hosts` file. Otherwise, SCP and SFTP will fail with the error message `curl: (60) SSL peer certificate or SSH remote key was not OK`. If `sys-update` fails, the user is prompted to add the hostname/IP address in the `known_hosts` file to proceed with `sys-update`.

Command Syntax

```
sys-update install (|(source-interface IFNAME | (source-ip (A.B.C.D | X:X::X:X))))
URL (verbose|)
```

Parameters

<code>source-interface</code> <code>IFNAME</code>	(Optional) Specifies the source interface name used to install the new version. If not specified, <code>eth0</code> is used.
<code>URL</code>	Specifies the URL parameter to indicate where to get the installer. < <code>http://username:password@your-server-ip/path/to/file/<abc-updater.deb> or abc-installer></code> > or < <code>ftp://username:password@your-server-ip/path/to/file/<abc-updater.deb> or abc-installer></code> > or < <code>tftp://your-server-ip/path/to/file/<abc-updater.deb> or abc-installer></code> > or < <code>scp://username:password@your-server-ip/path/to/file/<abc-updater.deb or abc-installer></code> > or < <code>sftp://username:password@your-server-ip/path/to/file/<abc-updater.deb> or abc-installer></code> > or < <code>file:///mnt/usb/path/to/file/<abc-updater.deb or abc-installer></code> >
<code>source-ip</code> <code>A.B.C.D</code>	(Optional) Specifies the IPv4 address of the interface used to download the new version.

<code>source-ip</code> <code>X:X::X:X</code>	(Optional) Specifies the IPv6 address of the interface used to download the new version.
<code>verbose</code>	(Optional) Include download logs in the output.

Default

None

Caution

OcNOS services are using `/usr/local/etc` path to store the device configuration, and this path mounted into a separate partition to isolate system configurations. This partition is meant only for system configuration. It will affect the system stability if the user uses this partition for storing general files. In this problematic state, if the device reboots, OcNOS services will not start properly, that would even create problems to the device connectivity. There will be an impact on normal system configuration operations.

User must take care of this problem just before issuing the following commands:

- `reload/sys-reload` - Reboots the device.
- `sys-shutdown` - This is to shutdown the device, but when user powers the device OcNOS services won't start cleanly.
- `reboot / shutdown` - From Linux shell
- Also includes all copy commands from Linux shell before issuing the user triggered reload commands.

Command Mode

Privileged Exec mode

Applicability

Introduced before OcNOS version 1.3.

Examples

```
OcNOS#sys-update install source-interface eth2 http://10.12.52.150/myServer/  
OcNOS-SP-MPLS-Q1-6.3.3-41-MR-installer
```

```
OcNOS#sys-update install http://10.12.52.150/myServer/OcNOS-SP-MPLS-  
Q1-6.3.3-41-MR-installer
```

sys-update list-version

Use this command to display files and folders. This command supports only FTP and the local file system.

Command Syntax

```
sys-update list-version ((source-interface IFNAME)|) URL
```

Parameters

source-interface IFNAME	(Optional) Specifies the source interface name used to list the version. If not specified, eth0 is used.
URL	Specifies the URL parameter to indicate where to get the installer. ftp://(username@)serverIP/path/to/file/ file:///mnt/usb/path/to/file/

Default

None

Command Mode

Privileged Exec mode

Applicability

Introduced before OcNOS version 1.3.

Examples

```
OcNOS#sys-update list-version ftp://10.12.52.150/
```

sys-update un-install

Use this command to un-install the device software remotely using the CLI and NetConf.management interfaces. This command decouples the device console dependency to un-install OcNOS.

This command puts the device in ONIE un-install mode and triggers device reboot. Upon reboot, ONIE detects the un-install mode and performs the un-installation. Once the un-installation completes, the device boots ONIE. To understand more about the un-installation technique, see the U-Boot and x86 Architecture sections at: <https://opencomputeproject.github.io/onie/design-spec/index.html#>.

Note: By default, ONIE has SSH and Telnet services running, so users also have the option to trigger the installation through the management connection. For more information about SSH and Telnet connectivity, see: <https://opencomputeproject.github.io/onie/user-guide/index.html#debugging-an-installation>.

Command Syntax

```
sys-update un-install
```

Parameters

None

Default

None

Command Mode

Privileged Exec mode

Applicability

Introduced in OcNOS version 1.3.8.

Examples

```
OcNOS#sys-update un-install
```

sys-update verify

Use this command to verify the checksum and compatibility of the downloaded image. This command does not install the image and just lists the compatibility with hardware, license and checksum.

Command Syntax

```
sys-update verify IMAGE_PATH
```

Parameters

`IMAGE_PATH` Specifies the path of downloaded image. File should be present in `/installers/`.

Default

None

Command Mode

Privileged Exec mode

Applicability

Introduced in OcNOS version 6.2.0

Examples

```
OcNOS#sys-update verify /installers/OcNOS-6.1.0-133-IPBASE_Q1-LD-installer
Verifying installer at /installers/OcNOS-6.1.0-133-IPBASE_Q1-LD-installer
Checksum Validation: PASS: Checksum: d5b641802bac97df08ea87353d1e3f5daa73212b
Installer compatibility with HW: PASS
License compatibility: PASS
Overall Status: PASS
```

Index

B

begin modifier 12
 BGP community value
 command syntax 10
 braces
 command syntax 9

C

command abbreviations 8
 command completion 8
 command line
 errors 8
 help 7
 keyboard operations 11
 command modes 15
 configure 15
 exec 15
 interface 15
 privileged exec 15
 router 15
 command negation 9
 command syntax
 ? 10
 . 10
 () 9
 {} 9
 | 9
 A.B.C.D/M 10
 AA:NN 10
 BGP community value 10
 braces 9
 conventions 9
 curly brackets 9
 HH:MM:SS 10
 IFNAME 10
 interface name 10
 IPv4 address 10
 IPv6 address 10
 LINE 10
 lowercase 9
 MAC address 10
 monospaced font 9
 numeric range 10
 parentheses 9
 parenteses 9
 period 10
 question mark 10
 square brackets 10
 time 10
 uppercase 9
 variable placeholders 10
 vertical bars 9
 WORD 10

X:X::X:X 10
 X:X::X:X/M 10
 XX:XX:XX:XX:XX:XX 10
 configure mode 15
 curly brackets
 command syntax 9

E

exec command mode 15

I

IFNAME 10
 interface mode 15
 IPv4 address
 command syntax 10
 IPv6 address
 command syntax 10

L

LINE 10

M

MAC address
 command syntax 10

P

parentheses
 command syntax 9
 parenteses
 command syntax 9
 period
 command syntax 10
 privileged exec mode 15

Q

question mark
 command syntax 10

R

router mode 15

S

show commands 12
 exclude modifier 13
 include modifier 13
 redirect modifier 14
 square brackets
 command syntax 10

T

time
command syntax 10

V

vertical bars

command syntax 9

W

WORD 10